


Roller Shade with Deluxe Valance Installation Instructions

1. MOUNT THE BRACKETS

Attach the brackets to the wall or window frame with outside brackets no further than 2 inches (50 mm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals. See illustration A.

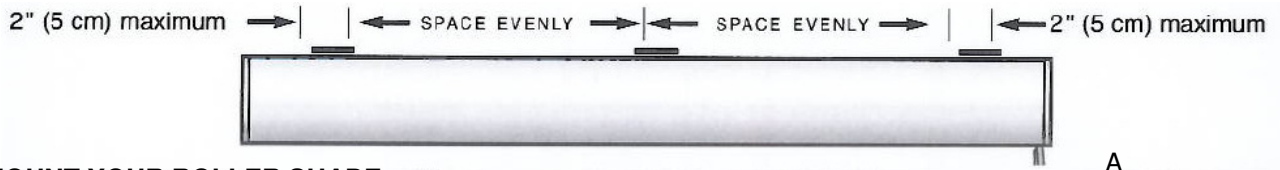

2. MOUNT YOUR ROLLER SHADE

Your roller shade is already mounted inside the valance. You will need to determine if your roller shade has the Small or Large Deluxe Valance by measuring the top surface of your valance from front to back. The small valance is 2 1/4". The large valance is 3".

SMALL DELUXE VALANCE

Make sure the release tab* is always on the bottom.

Wall or outside mount

Inside or ceiling mount

Position the valance with the front panel resting on the top lip of all brackets. Push the bottom front of the valance firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place.

To remove: From the bottom rear of the headrail, insert a flathead screwdriver in between the valance and release tab. Gently twist the screwdriver and pry open the bracket to release the valance.

LARGE DELUXE VALANCE

Make sure the release tab* is always on the top.

Wall or outside mount

Inside or ceiling mount


Position the valance with the back panel resting on both bottom hooks** of all brackets. Push the front of the headrail firmly upwards and toward the window until the groove at the top of the headrail snaps into place, as shown.

To remove: From the top front of the valance, insert a flathead screwdriver in between the valance and the release tab. Gently twist the screwdriver and pry open the bracket to release the valance. As you release the brackets, support the valance to keep it from falling.

3. INSTALL TENSION DEVICE

The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord or bead chain. Anchor the Tension Device, that is attached to the shade's bead chain, to the window frame or wall, so that young children cannot pull the cord around their necks.

- a. Lower the shade.
- b. Hold the Tension Device upright so the Warning Tag hangs straight down as shown in diagram. See illustration B.
- c. Position the Tension Device on the window frame or wall so that the Tension Device and bead chain do not interfere with the raising or lowering of the shade. **The tension device should be installed without stretching or pulling down on the bead chain. Stretching the bead chain will cause excessive wear. Do not twist or cross the bead chain.** Position the Tension Device to allow the stop ball to pass through the tension device.
- d. Holding the Tension Device upright, and in position, as shown, insert and secure the screw through the hole. The mounting screw must be secured into a solid surface or use a mounting anchor.

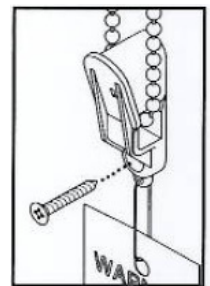

4. OPERATE THE SHADE

One side of the bead chain raises the shade, the other lowers the shade. Do not lift the bottomrail with your hands. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly.

Warranty & Cleaning

Roller Shades with Deluxe Valance

3 Day Blinds Limited Lifetime Warranty

This warranty applies only to products manufactured by, or legally branded as 3 DAY BLINDS products. 3 Day Blinds, Inc. ("3DB") will repair or replace (with the same or similar model), at its own option, any part of the products found to be defective in materials or workmanship at no cost to you. This warranty is limited to the original purchaser of the products. This warranty does not apply to any defect caused by improper installation, alteration, abuse, misuse or exposure to excess heat or moisture. This warranty does not cover normal wear and tear, such as the natural deterioration of fabric and changes in color that take place over time. This warranty does not cover products that exceed 3DB's size recommendations. To obtain service, bring the product(s) in question to any 3DB showroom with this warranty and your original purchase invoice or call 1-888-353-3329 for assistance.

THERE ARE NO WARRANTIES THAT EXTEND BEYOND THIS EXPRESS WARRANTY. 3DB DISCLAIMS ALL OTHER WARRANTIES, EXPRESS AND/OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. UNDER NO CIRCUMSTANCES SHALL 3DB BE LIABLE FOR LOST PROFITS, OR OTHER INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES. Some states do not allow the exclusion or limitation of incidental damages, so the above limitations or exclusions may not apply to everyone. This warranty gives everyone specific legal rights including other rights which vary from state to state.

Care and Cleaning

Maintain the beauty of your custom window treatments for years to come by following these simple steps:

- Dust regularly
- Carefully vacuum periodically with the brush attachment
- Spot clean with damp cloth or mild detergent



3DAYBLINDS™

800-800-3329

3dayblinds.com